


Instructions for the Operation of Double Date Stamps

To change the month (outer arrow), insert a screwdriver into the slot and turn **COUNTER-CLOCKWISE**. Note: The outside diameter of the unit may need to be in compression (as when press fit into the mating hole in the mold) for the outside ring to turn. It may not turn in free state.

To change the year (inner arrow), insert a screwdriver into the slot and turn **CLOCKWISE**.

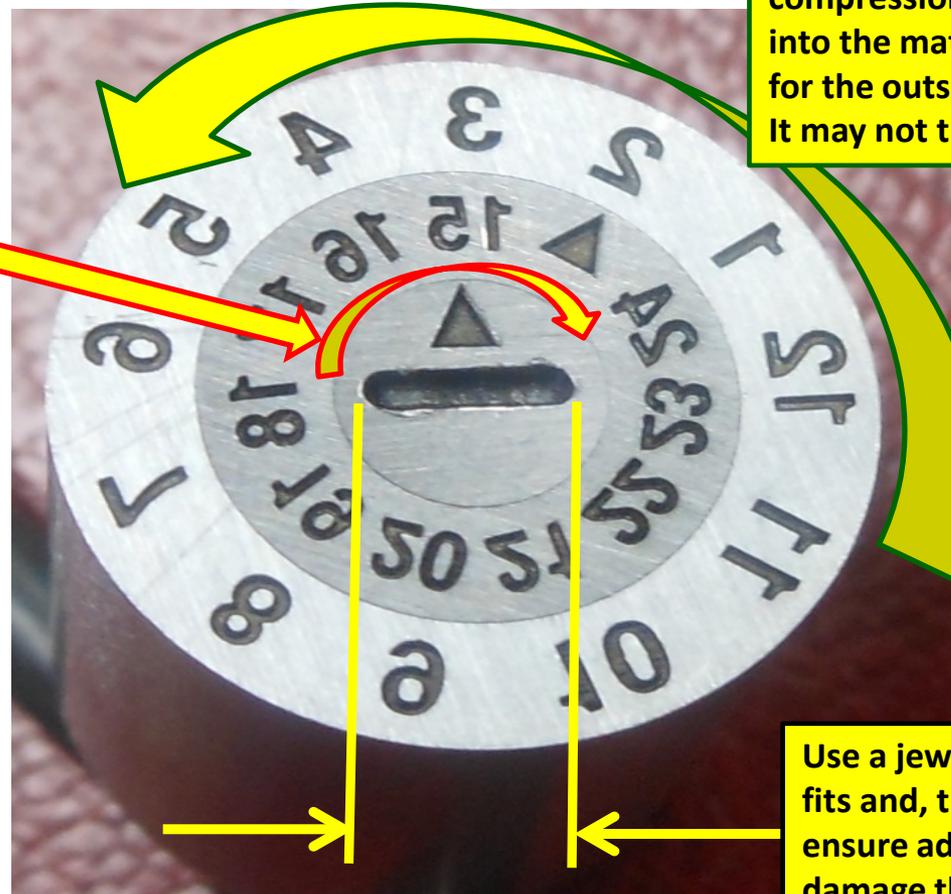

Use a jeweler's screwdriver that fits and, the tip fills the slot, to ensure adequate torque and not damage the edges of the slot (as shown above).