



PRODUCTS AND SPARE PARTS

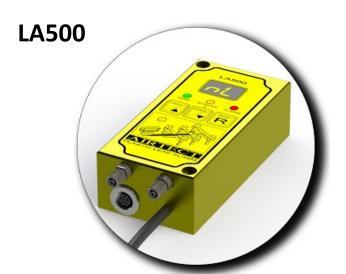




TABLE OF CONTENTS

Category	Page(s)
Single Zone / Control Units	1-2
4-Zone Configuration	3
4-Zone	4-5
4-Zone Stand-Alone	6 – 7
8-Zone Configuration	8
<u>8-Zone</u>	9 – 10
8-Zone Stand-Alone	11 – 12
16-Zone Configuration	13
<u>16-Zone</u>	14 – 15
16-Zone Stand-Alone	16
24-Zone Configuration	17
24-Zone	18 – 19
24-Zone Stand-Alone	20
AIRTECT ULTIMATE	21
AIRTECT ULTIMATE 6-Zone + 1 Loop Configuration	22
AIRTECT ULTIMATE 6-Zone + 1 Loop Stand-Alone	23 – 24
AIRTECT ULTIMATE 12-Zone + 2 Loop Configuration	25
AIRTECT ULTIMATE 12-Zone + 2 Loop Stand-Alone	26 – 27
AIRTECT ULTIMATE 20-Zone + 2 Loop Configuration	28
AIRTECT ULTIMATE 20-Zone + 2 Loop Stand-Alone	29 – 30
Accessories	31 – 34






LA500 'SINGLE' INJECTION NOZZLE PLASTIC LEAK ALARM (AND CONTROL UNIT FOR FIXED AND MODULAR MANIFOLDS)

Kit Includes:

- LA500 with 2 x 7-segment LED display with programmable operational settings
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- 3 Meters PU Tube
- 0.5 Meters 2.5mm Silicone Rubber Tube
- 3 Meters 2mm Stainless Steel Sensor Tube
- 2 Meter Electrical Power/Interlock Cable
- Installation/Operation Manual

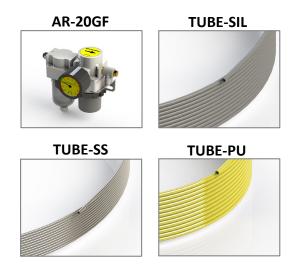



LA502 'DUAL' INJECTION NOZZLE PLASTIC LEAK ALARM (AND CONTROL UNIT FOR FIXED AND MODULAR MANIFOLDS)

Kit Includes:

- LA502 with 2 x 7-segment LED display with programmable operational settings
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- 6 Meters PU Tube
- 1 Meters 2.5mm Silicone Rubber Tube
- 6 Meters 2mm Stainless Steel Sensor Tube
- 2 Meter Electrical Power/Interlock Cable
- Installation/Operation Manual





LM2050



LM2050 'SINGLE' INJECTION NOZZLE PLASTIC LEAK ALARM (AND CONTROL UNIT FOR FIXED AND MODULAR MANIFOLDS)

Kit Includes:

- LM2050 with 2-line, 16-character LCD display with multiple languages and programmable operational settings
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- 3 Meters PU Tube
- 0.5 Meters 2.5mm Silicone Rubber Tube
- 3 Meters 2mm Stainless Steel Sensor Tube
- 3 Meter Electrical Power/Interlock Cable
- Installation/Operation Manual











4-ZONE (with Programmable Controller)



4-ZONE Stand-Alone (without Programmable Controller)





4-ZONE



4-ZONE FIXED LEAK ALARM MANIFOLD (Requires connection to LA500 or LM2050 control/display unit via PCC-X Power/Relay Interlock Cable. Requires LA504-B-X Base.)


Kit Includes:

- LA504 Fixed Manifold
- 3 Meters PU Tube
- 1 Meter 2mm Silicone Rubber Tube
- 5 Meters Xmm Stainless Steel Sensor Tube
- (4) brackets and (8) screws for Sensor Tube
- Installation/Operation Manual

X=Sensor Tube Diameter: 1.6mm or 2.0mm

PROGRAMMABLE OPTIONS VIA LA500 or LM2050

CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM

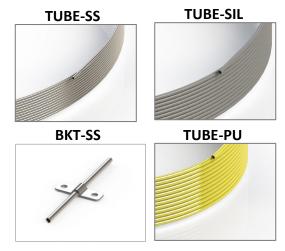

LA504-M-H



4-ZONE MODULAR LEAK ALARM MANIFOLD (HANDLE) (Requires connection to LA500 or LM2050 control/display unit via PCC-X Power/Relay Interlock Cable)

Kit Includes:

- LA504 Modular Manifold with Handle Release
- 3 Meters PU Tube
- Protection Base
- Installation/Operation Manual

PROGRAMMABLE OPTIONS VIA LA500 or LM2050





4-ZONE

LA504-M-S



4-ZONE MODULAR LEAK ALARM MANIFOLD (SCREW) (requires connection to LA500 or LM2050 control/display unit via PCC-X Power/Relay Interlock Cable. Requires LA504-B-X Base.)

Kit Includes:

- LA504 Modular Manifold with Screw Release
- 3 Meters PU Tube
- Protection Base
- Installation/Operation Manual

PROGRAMMABLE OPTIONS VIA LA500 or LM2050

CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM

LA504-B-X



4-ZONE MODULAR LEAK ALARM MANIFOLD BASE (USE WITH LA504-M-H, LA504-M-S, LA504S-M-H or LA504S-M-S)

Kit Includes:

- LA504-B Manifold Base
- 1 Meter 2mm Silicone Rubber Tube
- 5 Meters Xmm Stainless Steel Sensor Tube
- (4) brackets and (8) screws for Sensor Tube

X=Sensor Tube Diameter: 1.6mm or 2.0mm

TUBE-PU

TUBE-SS

TUBE-SIL

BKT-SS



4-ZONE STAND-ALONE



4-ZONE FIXED STAND-ALONE LEAK ALARM MANIFOLD (Does NOT require connection to LA500 or LM2050 control/display unit. Requires PCC-S-X Power/Relay Interlock cable.)

Kit Includes:


- LA504S Fixed Stand-Alone Manifold with LED Display
- 3 Meters PU Tube
- 1 Meter 2mm Silicone Rubber Tube
- 5 Meters Xmm Stainless Steel Sensor Tube
- (4) brackets and (8) screws for Sensor Tube
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

X=Sensor Tube Diameter: 1.6mm or 2.0mm

NON-PROGRAMMABLE / CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM



LA504S-M-H

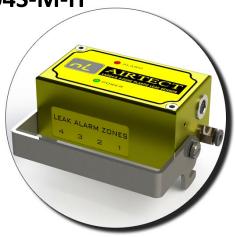

4-ZONE MODULAR STAND-ALONE LEAK ALARM MANIFOLD (HANDLE) (Does NOT require connection to LA500 or LM2050 control/display unit. Requires LA504-B-X Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA504S Modular Stand-Alone Manifold with Handle Release and LED Display
- 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE







4-ZONE STAND-ALONE

LA504S-M-S




4-ZONE MODULAR STAND-ALONE LEAK ALARM MANIFOLD (SCREW) (Does NOT require connection to LA500 or LM2050 control/display unit. Requires LA504-B-X Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA504S Modular Stand-Alone Manifold with Screw Release and LED Display
- 3 Meters PU Tube
- · Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

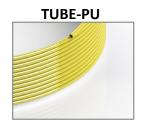





8-ZONE (with Programmable Controller)



8-ZONE Stand-Alone (without Programmable Controller)





8-ZONE

LA508-X-N



8-ZONE FIXED LEAK ALARM MANIFOLD (requires connection to LA500 or LM2050 control/display unit via PCC-X Power/Relay Interlock Cable)

Kit Includes:


- LA508 Fixed Manifold
- 3 Meters PU Tube
- 2 Meters 2mm Silicone Rubber Tube
- 10 Meters Xmm Stainless Steel Sensor Tube
- (8) brackets and (16) screws for Sensor Tube
- Installation/Operation Manual

X=Sensor Tube Diameter: 1.6mm or 2.0mm

N=1,2,3 or 4

1=Zones 1-8, 2=Zones 9-16, 3=Zones 17-24, 4=Zones 25-32 PROGRAMMABLE OPTIONS VIA LA500 or LM2050 CAN BE DAISY CHAINED AS PART OF A LARGER

SYSTEM

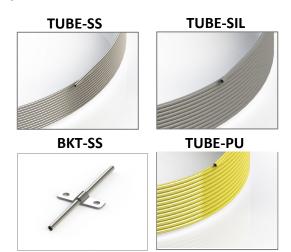

LA508-M-H-N



8-ZONE MODULAR LEAK ALARM MANIFOLD (HANDLE) (requires connection to LA500 or LM2050 control/display unit via PCC-X Power/Relay Interlock Cable. Requires LA-508-B-X Base.)

Kit Includes:

- LA508-M Modular Manifold with Handle Release
- 3 Meters PU Tube
- Protection Base
- Installation/Operation Manual

N=1,2,3 or 4

1=Zones 1-8, **2**=Zones 9-16, **3**=Zones 17-24, **4**=Zones 25-32

PROGRAMMABLE OPTIONS VIA LA500 or LM2050





8-ZONE

LA508-M-S-N



8-ZONE MODULAR LEAK ALARM MANIFOLD (SCREW) (requires connection to LA500 or LM2050 control/display unit via PCC-X Power/Relay Interlock Cable. Requires LA508-B-X Base.)

Kit Includes:

- LA508-M Modular Manifold with Screw Release
- 3 Meters PU Tube
- Protection Base
- Installation/Operation Manual

N=1,2,3 or 4

1=Zones 1-8, **2**=Zones 9-16, **3**=Zones 17-24, **4**=Zones 25-32

PROGRAMMABLE OPTIONS VIA LA500 or LM2050

LA508-B-X



8-ZONE MODULAR LEAK ALARM MANIFOLD BASE (USE WITH LA508-M-H, LA508-M-S, LA508S-M-H, LA508S-M-S, LA606-1L, LA506-1L-M-H, LA506-1L-M-S, LA506S-1L-M-H or LA506S-1L-M-S)

Kit Includes:

- LA508-B Manifold Base
- 2 Meters 2mm Silicone Rubber Tube
- 10 Meters Xmm Stainless Steel Sensor Tube
- (8) brackets and (16) screws for Sensor Tube

X=Sensor Tube Diameter: 1.6mm or 2.0mm









8-ZONE STAND-ALONE






8-ZONE FIXED STAND-ALONE LEAK ALARM MANIFOLD (Does NOT require connection to LA500 or LM2050 control/display unit. Requires PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA508 Fixed Stand-Alone Manifold with LED Display
- 3 Meters PU Tube
- 2 Meters 2mm Silicone Rubber Tube
- 10 Meters Xmm Stainless Steel Sensor Tube
- (8) brackets and (16) screws for Sensor Tube
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

X=Sensor Tube Diameter: 1.6mm or 2.0mm

NON-PROGRAMMABLE / CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM

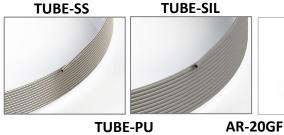







LA508S-M-H




8-ZONE MODULAR STAND-ALONE LEAK ALARM MANIFOLD (HANDLE) (Does NOT require connection to LA500 or LM2050 control/display unit. Requires LA508-B-X Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA508S Modular Stand-Alone Manifold with Handle Release and LED Display
- 3 Meters PU Tube
- **Protection Base**
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

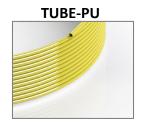





8-ZONE STAND-ALONE

LA508S-M-S




8-ZONE MODULAR STAND-ALONE LEAK ALARM MANIFOLD (SCREW) (Does NOT require connection to LA500 or LM2050 control/display unit. Requires LA508-B-X Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA508S Modular Stand-Alone Manifold with Screw Release and LED Display
- 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

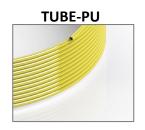





16-ZONE (with Programmable Controller)

LA500 LM2050 **LA516-M-H-N**

LA516-B-X

PCC-X



OR





LA500

LM2050

LA516-M-S-N

LA516-B-X

PCC-X



OR





16-ZONE Stand-Alone (without Programmable Controller)

LA516S-M-H

LA516-B-X

PCC-S-X







LA516S-M-S

LA516-B-X

PCC-S-X









16-ZONE

LA516-M-H-N



16-ZONE MODULAR LEAK ALARM MANIFOLD (HANDLE) (requires connection to LA500 or LM2050 control/display unit via PCC-X Power/Relay Interlock Cable. Requires LA516-B-X Base.)

 
Kit Includes:

- LA516-M-H Modular Manifold with Handle Release
- 3 Meters PU Tube
- · Protection Base
- Installation/Operation Manual

PROGRAMMABLE OPTIONS VIA LA500 or LM2050

N=1 or 2

1=Zones 1-16, 2=Zones 17-32



LA516-M-S-N



16-ZONE MODULAR LEAK ALARM MANIFOLD (SCREW) (requires connection to LA500 or LM2050 control/display unit via PCC-X Power/Relay Interlock Cable. Requires LA516-B-X Base.)

 
Kit Includes:

- LA516-M-S Modular Manifold with Screw Release
- 3 Meters PU Tube
- Protection Base
- · Installation/Operation Manual

PROGRAMMABLE OPTIONS VIA LA500 or LM2050

N=1 or 2

1=Zones 1-16, **2**=Zones 17-32





16-ZONE BASE

LA516-B-X



16-ZONE MODULAR LEAK ALARM MANIFOLD BASE (Use with LA516-M-H, LA516-M-S, LA516S-M-H, LA516S-M-S, LA512-2L-M-H, LA512-2L-M-S, LA512S-2L-M-H or LA512S-2L-M-S)

Kit Includes:

- LA516-B Manifold Base
- 4 Meters 2.5mm Silicone Rubber Tube
- 20 Meters Xmm Stainless Steel Sensor Tube
- (16) brackets and screws for Sensor Tube

X=Sensor Tube Diameter: 1.6mm or 2.0mm





16-ZONE STAND-ALONE

LA516S-M-H



 
16-ZONE MODULAR STAND-ALONE LEAK ALARM MANIFOLD (HANDLE) (Does NOT require connection to LA500 or LM2050 control/display unit. Requires LA516-B-X Base and PCC-S-X Power/Relay Interlock cable)

Kit Includes:

- LA516S Modular Stand-Alone Manifold with Handle Release and LED Display
- 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM





LA516S-M-S



16-ZONE MODULAR STAND-ALONE LEAK ALARM MANIFOLD (SCREW) (Does NOT require connection to LA500 or LM2050 control/display unit. Requires LA516-B-X Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA516S Modular Stand-Alone Manifold with Screw Release and LED Display
- 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE







24-ZONE (with Programmable Controller)

LA500

LM2050

LA524-M-H-N

LA524-B-X

PCC-X



OR



A STATE OF THE STA



LA500

LM2050

LA524-M-S-N

LA524-B-X

PCC-X



OR







24-ZONE Stand-Alone (without Programmable Controller)

LA524S-M-H

LA524-B-X

PCC-S-X











LA524S-M-S

LA524-B-X

PCC-S-X














24-ZONE

LA524-M-H-N

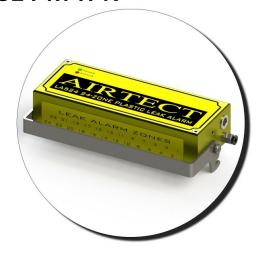

24-ZONE MODULAR LEAK ALARM MANIFOLD (HANDLE) (requires connection to LA500 or LM2050 control/display unit via PCC-X Cable. Requires LA524-B-X Base.)


Kit Includes:

- LA524-M-H Modular Manifold with Handle Release
- 3 Meters PU Tube
- Protection Base
- Installation/Operation Manual

PROGRAMMABLE OPTIONS VIA LA500 or LM2050

N=1 or 2

1=Zones 1-24, 2=Zones 25-48

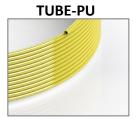

LA524-M-S-N



24-ZONE MODULAR LEAK ALARM MANIFOLD (SCREW) (requires connection to LA500 or LM2050 control/display unit via PCC-X Cable. Requires LA524-B-X Base.)

Kit Includes:

- LA524-M-S Modular Manifold with Screw Release
- 3 Meters PU Tube
- Protection Base
- Installation/Operation Manual

PROGRAMMABLE OPTIONS VIA LA500 or LM2050

N=1 or 2

1=Zones 1-24, **2**=Zones 25-48





24-ZONE BASE

LA524-B-X



24-ZONE MODULAR LEAK ALARM MANIFOLD BASE (Use with LA524-M-H, LA524-M-S, LA524S-M-H, LA524S-M-S, LA520-2L-S-M-H or LA520-2L-S-M-S)

Kit Includes:

- LA524-B Manifold Base
- 6 Meters 2.5mm Silicone Rubber Tube
- 30 Meters 1.6mm Stainless Steel Sensor Tube
- (24) brackets and screws for Sensor Tube

X=Sensor Tube Diameter: 1.6mm or 2.0mm





24-ZONE STAND-ALONE

LA524S-M-H



 
24-ZONE MODULAR STAND-ALONE LEAK ALARM MANIFOLD (HANDLE) (Does NOT require connection to LA500 or LM2050 control/display unit. Requires LA524-B-X Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA524S Modular Stand-Alone Manifold with Handle Release and LED Display
- 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM





LA524S-M-S




24-ZONE MODULAR STAND-ALONE LEAK ALARM MANIFOLD (SCREW) (Does NOT require connection to LA500 or LM2050 control/display unit. Requires LA524-B-X Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA524S Modular Stand-Alone Manifold with Screw Release and LED Display
- 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

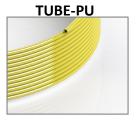







COMPLETE HOT RUNNER MOLD PROTECTION! DETECT YOUR HOT RUNNER LEAKS EARLY!

- New ULTIMATE range of Plastic Leak Detection Manifolds incorporate 'POINT' Leak Detection Zones + 'LOOP' Leak Detection Zones in the one Manifold.
- 'POINT' Plastic Leak Detection Zones are used for the detection of leaking plastic at the Nozzle Gates.
- 'LOOP' Plastic Leak Detection Zones are used for the detection of leaking plastic at numerous locations on the Hot Runner Manifold.
- 'LOOP' Plastic Leak Detection is provided when the Silicone Rubber tubes are Compressed OR Broken due to closed circuit design.
- Available in 3 Manifold Sizes: 6 Point+1 Loop, 12 Point+2 Loops, 20 Point+2 Loops.
- Available as Stand-Alone Manifolds.
- · Patent Pending.


INSTALLATION EXAMPLE USING LA512-2L-S ULTIMATE STAND ALONE MANIFOLD:

'POINT' Plastic Leak Detection Zones:

8 used on the Nozzle Gates (4 unused)

'LOOP' Plastic Leak Detection Zones:

- 1 loop circuit used on the 8 x Nozzle/Manifold interfaces.
- 1 loop circuit used on the rear Inlet Bushing/Manifold interface.

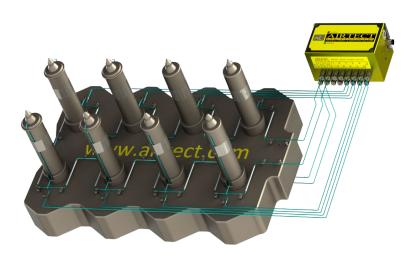





6-ZONE + 1 LOOP (Stand-Alone)

LA506-1L-S-X

PCC-S-X





LA506-1L-S-M-H

LA508-B-X

PCC-S-X







LA506-1L-S-M-S

LA508-B-X

PCC-S-X











6-ZONE + 1 LOOP STAND-ALONE

LA506-1L-S-X



6-ZONE + 1 LOOP FIXED STAND-ALONE ULTIMATE LEAK ALARM MANIFOLD (Does NOT require connection to LA500 or LM2050 control/display unit. Requires PCC-S-X Power/Relay Interlock cable)

Kit Includes:

- LA506-1L-S ULTIMATE Fixed Stand-Alone Manifold with LED Display
- 3 Meters PU Tube
- 2 Meters 2mm Silicone Rubber Tube
- 10 Meters Xmm Stainless Steel Sensor Tube
- (8) Bracket kits for Sensor Tube
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

X=Sensor Tube Diameter: 1.6mm or 2.0mm

NON-PROGRAMMABLE / CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM

TUBE-SS

TUBE-SIL

BKT-SS

 






TUBE-PU

AR-20GF





LA506-1L-S-M-H



6-ZONE + 1 LOOP MODULAR STAND-ALONE

ULTIMATE LEAK ALARM MANIFOLD (HANDLE) (Does

NOT require connection to LA500 or LM2050

control/display unit. Requires LA508-B-X Base and

PCC-S-X Power/Relay Interlock cable.)

 
Kit Includes:

- LA506-1L-S-M-H ULTIMATE Modular Stand-Alone Manifold with Handle Release and LED Display
- 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

TUBE-PU

AR-20GF









6-ZONE + 1 LOOP STAND-ALONE

LA506-1L-S-M-S




6-ZONE + 1 LOOP MODULAR STAND-ALONE
ULTIMATE LEAK ALARM MANIFOLD (SCREW)
(Does NOT require connection to LA500 or
LM2050 control/display unit. Requires LA508-B-X
Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA506-1L-S-M-S ULTIMATE Modular Stand-Alone Manifold with Screw Release and LED Display
- 3 Meters PU Tub
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- · Installation/Operation Manual

NON-PROGRAMMABLE

CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM

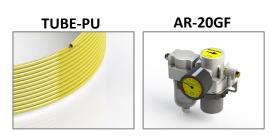

LA508-B-X



8-ZONE MODULAR LEAK ALARM MANIFOLD BASE (USE WITH LA508-M-H, LA508-M-S, LA508S-M-H, LA508S-M-S, LA506-1L-S-M-H or LA506-1L-S-M-S)

Kit Includes:

- LA508-B Manifold Base
- 2 Meters 2mm Silicone Rubber Tube
- 10 Meters Xmm Stainless Steel Sensor Tube
- (8) brackets and (16) screws for Sensor Tube

X=Sensor Tube Diameter: 1.6mm or 2.0mm







12-Zone + 2 LOOP (Stand-Alone)

LA512-2L-S-M-H

LA516-B-X

PCC-S-X









LA512-2L-S-M-S

LA516-B-X

PCC-S-X











12-ZONE + 2 LOOP STAND-ALONE

LA512-2L-S-M-H



12-ZONE + 2 LOOP MODULAR STAND-ALONE
ULTIMATE LEAK ALARM MANIFOLD (HANDLE)
(Does NOT require connection to LA500 or
LM2050 control/display unit. Requires LA516-B-X
Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA512-2L-S-M-H ULTIMATE Modular Stand-Alone Manifold with Handle Release and LED Display
- 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM

TUBE-PU



LA512-2L-S-M-S




12-ZONE + 2 LOOP MODULAR STAND-ALONE ULTIMATE LEAK ALARM MANIFOLD (SCREW) (Does NOT require connection to LA500 or LM2050 control/display unit. Requires LA516-B-X Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA512-2L-S-M-S ULTIMATE Modular Stand-Alone Manifold with Screw Release and LED Display
- 3 Meters PU Tube
- · Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

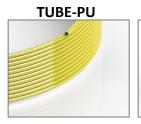







12-ZONE + 2 LOOP BASE





16-ZONE MODULAR LEAK ALARM MANIFOLD BASE (Use with LA516-M-H, LA516-M-S, LA516S-M-H, LA516S-M-S, LA512-2L-S-M-H or LA512-2L-S-M-S)

Kit Includes:

- LA516-B Manifold Base
- 4 Meters 2.5mm Silicone Rubber Tube
- 20 Meters Xmm Stainless Steel Sensor Tube
- (16) Bracket kits for Sensor Tube

X=Sensor Tube Diameter: 1.6mm or 2.0mm







20-Zone + 2 LOOP (Stand-Alone)

LA520-2L-S-M-H

LA524-B-X

PCC-S-X









LA520-2L-S-M-S

LA524-B-X

PCC-S-X













20-ZONE + 2 LOOP STAND-ALONE

LA520-2L-S-M-H



20-ZONE + 2 LOOP MODULAR STAND-ALONE

ULTIMATE LEAK ALARM MANIFOLD (HANDLE)
(Does NOT require connection to LA500 or

LM2050 control/display unit. Requires LA524-B-X
Base and PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA520-2L-S-M-H ULTIMATE Modular Stand-Alone Manifold with Handle Release and LED Display
- 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

CANNOT BE DAISY CHAINED AS PART OF A LARGER SYSTEM

TUBE-PU



LA520-2L-S-M-S




20-ZONE + 2 LOOP MODULAR STAND-ALONE
ULTIMATE LEAK ALARM MANIFOLD (SCREW) (Does
NOT require connection to LA500 or LM2050
control/display unit. Requires LA524-B-X Base and
PCC-S-X Power/Relay Interlock cable.)

Kit Includes:

- LA520-2L-S-M-S ULTIMATE Modular Stand-Alone Manifold with Screw Release and LED Display
- · 3 Meters PU Tube
- Protection Base
- AR-20GF Air Pressure Regulator with Pressure Gauge, Air Filter and Fittings
- Installation/Operation Manual

NON-PROGRAMMABLE

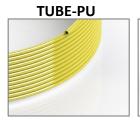







20-ZONE + 2 LOOP BASE

LA524-B-X



24-ZONE MODULAR LEAK ALARM MANIFOLD BASE (Use with LA524-M-H, LA524-M-S, LA524S-M-H, LA524S-M-S, LA520-2L-S-M-H or LA520-2L-S-M-S)

Kit Includes:

- LA524-B Manifold Base
- 6 Meters 2.5mm Silicone Rubber Tube
- 30 Meters Xmm Stainless Steel Sensor Tube
- (24) bracket kits for Sensor Tube

X=Sensor Tube Diameter: 1.6mm or 2.0mm





AR-20GF



Air Pressure Regulator with gauge, air filter and fittings

TUBE-PU-10M



10mm Coil of 4mm PU (Plastic) Tubing

PCC-X




Power / Communication
Cable

TUBE-SIL-10M-X



10 Meter Coil of 2.5mm Silicone Rubber Tubing

LA-MAN-4-X

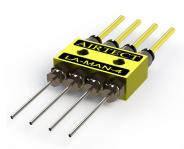

4-Zone Tube Adaptor

LA-MAN-2-X



2-Zone Tube Adaptor

NUT-SS-X



Nut and Olive Set of 5 for Stainless Steel Tubing

FIT-PU-SS-X



Joiner Fitting for 4mm PU (Plastic) Tube

FIT-SS-SS-X



Joiner Fitting for Stainless Steel Tubing

TUBE-SS-10M-X



10 Meter Coil of Stainless Steel Tubing

BKT-SS



Mounting Bracket Set of 10 for Stainless Steel Tubing

PCC-S-X



Power / Relay Interlock Cable



AR-20GF



AIR PRESSURE REGULATOR WITH PRESSURE GAUGE, AIR FILTER AND FITTINGS

Use with LA500 and LM2050 Injection Nozzle Plastic Leak Alarm and Control Units

WEIGHT 0.35 Kg

TUBE-PU-10M



10 METER COIL OF 4mm PU (plastic) TUBING

Use for air connections between Control Units, Manifolds, Regulators and Supply

WEIGHT 0.05 Kg

PCC-X



POWER/COMUNICATION CABLE X Meter

Use to connect LA500 or LM2050 to Manifold or Manifold (daisy chain) up to 32 Channels.

Standard sizes are (Meters):

X = 0.6 X = 1.5 X = 3 X = 5 X = 10

WEIGHT 0.10 Kg

TUBE-SIL-10M-X



10 METER COIL OF Xmm SILICONE RUBBER TUBING


Use to make Sensor Tube ends for LA500 and LM2050 and use to extend the range of LA508/LA516 leak detection.

X=2.0mm or 2.5mm

WEIGHT 0.05 Kg



LA-MAN-4-X

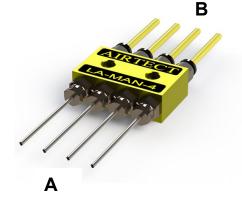

4-ZONE TUBE ADAPTOR MANIFOLD(Use to join Stainless Steel Tube to Stainless Steel Tube or PU Tube)


Kit Includes:

• LA-MAN-4-X Manifold and Fittings to suit the following Tube Sizes:

X=1	A=SS1.6mm	B=SS1.6mm
X=2	A=SS1.6mm	B=SS2.0mm
X=3	A=SS1.6mm	B=PU4.0mm
X=4	A=SS2.0mm	B=SS2.0mm
X=5	A=SS2.0mm	B=PU4.0mm
X=6	A=PU4.0mm	B=PU4.0mm

WEIGHT 0.15 Kg

LA-MAN-2-X

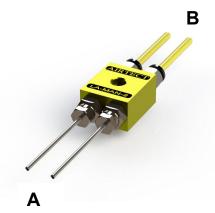

2-ZONE TUBE ADAPTOR MANIFOLD (Use to join Stainless Steel Tube to Stainless Steel Tube or PU Tube)

Kit Includes:

LA-MAN-2-X Manifold and Fittings to suit the following Tube Sizes:

X=1	A=SS1.6mm	B=SS1.6mm
X=2	A=SS1.6mm	B=SS2.0mm
X=3	A=SS1.6mm	B=PU4.0mm
X=4	A=SS2.0mm	B=SS2.0mm
X=5	A=SS2.0mm	B=PU4.0mm
X=6	A=PU4.0mm	B=PU4.0mm

WEIGHT 0.07 Kg

NUT-SS-X



NUT and OLIVE SET (5pcs) FOR Xmm OD STAINLESS STEEL TUBING

Use to connect Stainless Steel Sensor Tube to Manifold (LA508, LA508-B or LA516-B)

X = 1.6 for 1.6mm Sensor Tubing X = 2.0 for 2.0mm Sensor Tubing

WEIGHT 0.02 Kg

PCC-S-X



POWER/RELAY INTERLOCK CABLE X Meter

Use to connect Stand Alone Manifolds to DC Power and Interlock Relay connections

Standard sizes are (Meters):

X = 3 X = 5 X = 10

WEIGHT 0.10 K



FIT-PU-SS-X



JOINER FITTING FOR 4mm PU TUBE TO Xmm OD STAINLESS STEEL TUBING

Use to connect PU Tube to Stainless Steel Sensor Tubing

X = 1.6 for 1.6mm Sensor Tubing X = 2.0 for 2.0mm Sensor Tubing

FIT-SS-SS-X



JOINER FITTING FOR Xmm OD STAINLESS STEEL TUBING

Use to connect Stainless Steel Sensor Tube to Stainless Steel Sensor Tubing

X = 1.6 for 1.6mm Sensor Tubing X = 2.0 for 2.0mm Sensor Tubing

WEIGHT 0.01 Kg

TUBE-SS-10M-X



10 METER COIL OF Xmm OD STAINLESS STEEL TUBING

Use as Sensor Tubing within Hot Runner mold or molding Machine Barrel/Nozzle

X = 1.6 for 1.6mm Sensor Tubing X = 2.0 for 2.0mm Sensor Tubing

WEIGHT 0.15 Kg

BKT-SS



MOUNTING BRACKET SET (10pcs) FOR STAINLESS STEEL TUBING

Use to secure Stainless Steel Sensor Tube to Hot Runner Manifold/Mold Plate, etc.

Kit Includes:

- 10 x Mounting Brackets
- 20 x 2.9mm Self Tapping Stainless Screws
- Suitable for 1.6mm or 2.0mm Sensor Tube

WEIGHT 0.01 Kg



