PCS COMPANY
www.pcs-company.com

ONYX

PASSWORD LEVEL MANUAL

TC1200 / TC7200

Multi-Cavity Hot Runner Temperature Controller



Table of Contents

Chapter 1 Password Level Description 2
Chapter 2 Monitor 3
Chapter 3 Module setup 4
Chapter 4 System 5
Chapter 5 Mold 6
Chapter 6 Record 7

EN

Chapter 1　Password Level Description


1. Level user：
   Level 1: End user
   Level 2: Engineer
   Level 3: Machinery Factory or mold factory

2. Default password：
   Level 1：1111
   Level 2：2222
   Level 3：3333

EN

3. NOTES:
   Set the level of management is in accordance with the user and job descriptions and develop particular portfolio, in order to avoid unfamiliar parameter settings.
   Set and cause unnecessary trouble, if required level management, please change your password.

Chapter 2 Monitor

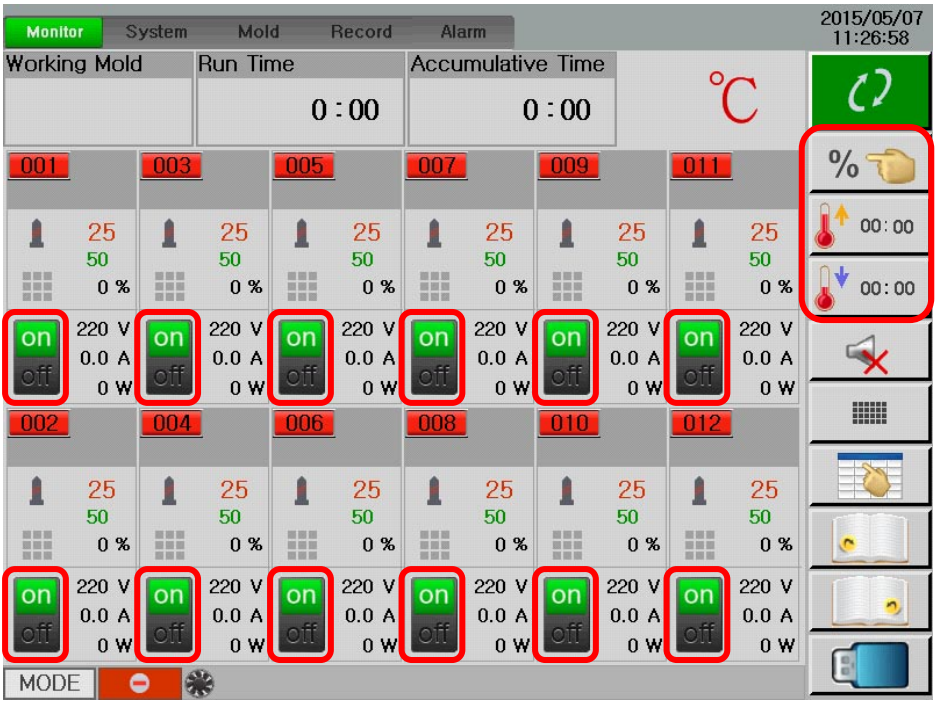

Red block: Password for Level 1 can be change

EN


Chapter 3 Module setup



Red block: Password for Level 1 can be change

Blue block: Password for Level 3 can be change

Chapter 4 System

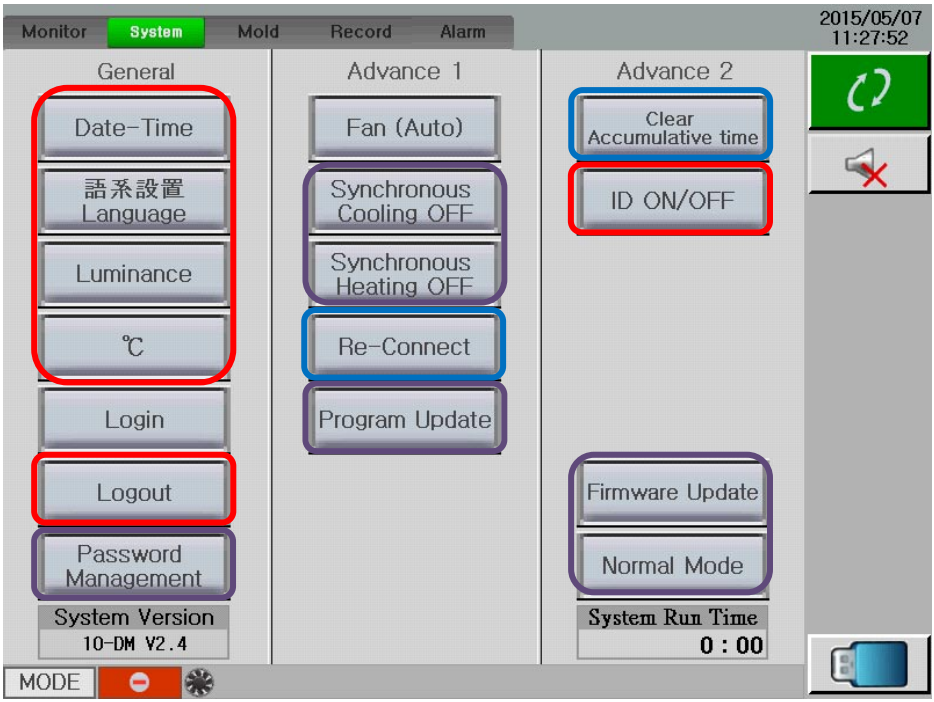


Red block: Password for Level 1 can be change

Purple block: Password for Level 2 can be change

Blue block: Password for Level 3 can be change

EN

Chapter 5 Mold Page

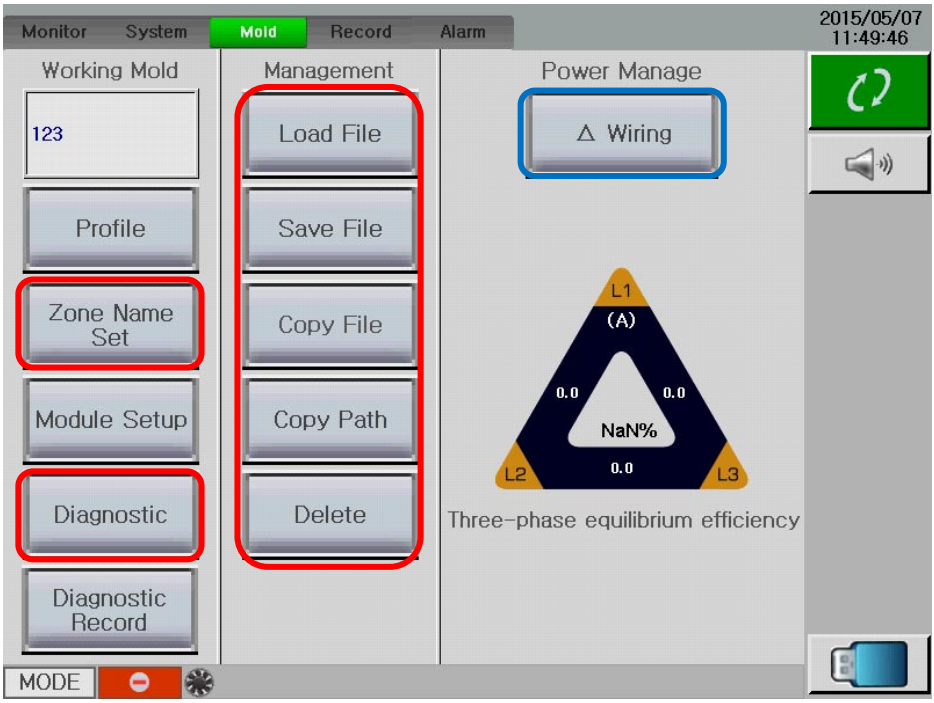

Red block: Password for Level 1 can be change

Blue block: Password for Level 3 can be change

Chapter 6 Record Page



Red block: Password for Level 1 can be change

EN

PCS COMPANY

www.pcs-company.com

34500 Doreka Dr.
Fraser, MI. 48026

Phone: 1-800-521-0546

sales@pcs-company.com

www.pcs-company.com