



SMARTLINK[®] Tracer[®] VM Interface

Create data files to support process validation.

Monitor cooling conditions remotely.

General Description

SMARTLINK Tracer_{VM} Interface collects, transmits and saves data from Tracer_{VM} Base flowmeters installed in injection mold cooling circuits.

Signal Input: Tracer_{VM} Base Flowmeters purchased separately are connected via cable to the Smartlink Tracer_{VM} Interface. The Smartlink Interface provides power to each flowmeter and receives voltage signals for temperature and flow.

Connect to PC via Ethernet: The Smartlink Interface communicates over Ethernet network connection to PC software for file storage and alerts. The files are easily read into external database software for reference or analysis. Scientific Molders can use this data to confirm processing parameters and optimize cycle times and cooling water efficiency.

When used with PC software, a dry contact switch is available for connection to a peripheral or machine control to signal an alarm for out of limit cooling water conditions. Configuration files can be saved and retrieved as needed for specific molds and machine combinations. These files will contain alarm settings, cooling circuit names, unit preferences, and all parameters set by the user for maximum efficiency.


Transmit to Mobile Devices via Bluetooth: The Smartlink Interface wirelessly transmits flow and temperature to display on a mobile device. Flow condition data log files can be created via app and saved on USB flash drive documenting the mold cooling water conditions.



VMBTI-102

Features and Benefits

- **Ethernet port connects the Interface to a local network** for communication with Data Logger PC Software.
- **Dry contact switch** signals out of limit temperature and flow rate conditions when using the Data Logger PC Software.
- **Provides power, ground and signal terminations** near the process to simplify connections to Tracer_{VM} Base units.
- **Transmits temperature and flow conditions** in real time to mobile devices for process monitoring up to 20 meters away.
- **USB port provides mobile device charging** plus flash drive connection.
- **Gasketed, water-resistant plastic enclosure** provides secure mounting in locations where occasional water spray is present.
- **Smartflow Data Logger PC Software** is available for download from the Smartflow-usa.com web site.

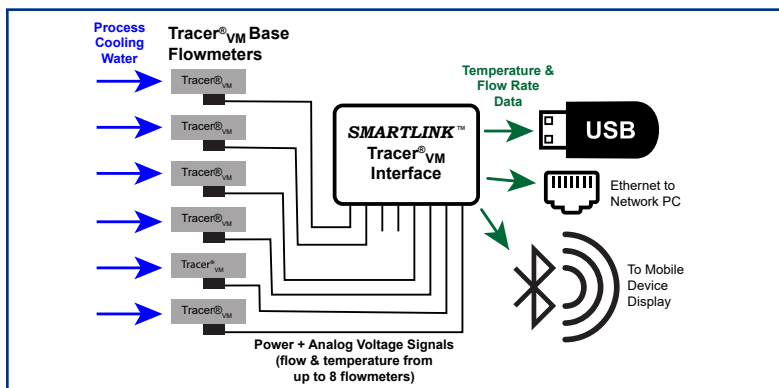

burger & brown
engineering, inc.

4500 E 142nd Street
Grandview, MO 64030 USA
Tel: 816-878-6675
www.smartflow-usa.com



The Apple logo and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc.

Design and specifications are subject to change without notice.

SMARTFLOW[®] SMARTLINK Tracer_{VM} Interface

Smartlink Tracer_{VM} Interface includes the interface module and software necessary to create cooling line log files to facilitate manufacturing process validation for critical parts.


The Ethernet port on the Interface connects to local network enabling log file creation, storage and process alerts. Dry contact switch works with PC software to signal out of limit condition to external alarm or stack light.

Peripheral equipment such as PC, Mobile Device or flash drives are user provided. Voltage input for temperature and flow are provided by Tracer_{VM} Base models. Refer to Smartflow catalog 186 for details.

The Tracer_{VM} Mobile App facilitates remote display of flow and temperature readings and creation of log files to be saved on USB flash drive inserted in the Interface.

Specifications

Housing	NEMA4X compliant
Operating Temperature	0°C to 52°C (32°F to 125°F)
Maximum Wireless Range	20 meters (65.6ft)
Maximum Tracer _{VM} Base Flowmeter	
Distance to Smartlink Tracer _{VM} Interface	3 meters (10ft)
Power Required	8 to 28VDC with earth ground (external) required to maintain signal integrity
Relay Switch Rating	2A, 250VAC/220VDC

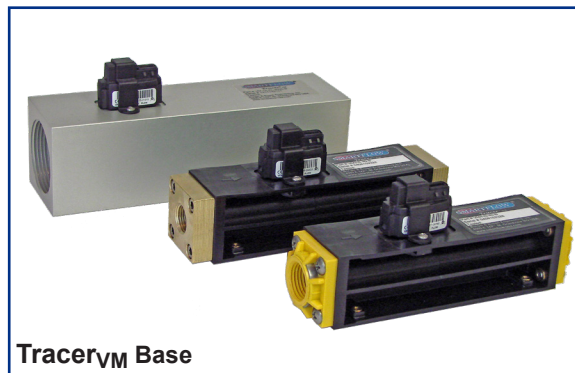

Tracer_{VM} Base

Smartlink Tracer_{VM} Interface must be used with at least one Tracer_{VM} Base Flowmeter for flow and temperature input. Up to eight flowmeters can be connected to one Smartlink Tracer_{VM} Interface. See Smartflow Catalog 186 for Tracer_{VM} Base details.

Data Logger (PC Based Software)

The Data Logger Software is provided free of charge as a download from the product web page. The Data Logger displays temperature and flow rate data from up to 10 Smartlink Tracer_{VM} Interface Modules with each module on a separate tab.

Functions:

- Save .csv file to specified location for archiving and analysis.
- Save configuration files for specific molds/machine combinations for retrieval as needed
- Name Smartlink Interface Units
- Name individual cooling circuits in the session (display only)
- Name .csv file
- Set Manual or Scheduled duration
- Select log rate between 1 and 3600 seconds
- Select Metric or English units
- Set alerts for low or high temperature and flow rates. **Alerts are disabled when recording is not active.**
- View real-time graph for each Tracer_{VM} Base unit.

Smartlink Tracer_{VM} Interface must be connected through a DHCP Client such as a wireless router or Local Area Network that will automatically assign an IP Address. The Interface will not communicate if plugged directly into a PC.

Dry contact switch changes state while alerts are active. Switch can be connected to external device such as low voltage stack light or machine control.

SMARTFLOW[®] SMARTLINK TRACER_{VM} Interface

Data Logger Screens


PC-Based **Smartflow Data Logger Software** provides temperature and flow process data that can be used in database software for reference and analysis. These data records are useful to injection molders maintaining compliance to regulatory requirements and quality control.

Two screen views are available: Home View and Session View.

Home View

The Home View displays graphs of temperature and flow cooling water conditions for all Tracer_{VM} Base flowmeters connected to Smartlink Tracer_{VM} Interface.

Up to 10 Interface Units can be displayed graphically on one screen. The maximum number of Smartlink Tracer_{VM} Interface Units visible for selection is 30. The Home View can show overall health of cooling water lines across the shop floor. An unexpected value for flow or temperature can be seen quickly and may be an indication of a blocked cooling line or out-of-tolerance processing conditions resulting in poor molded part quality.

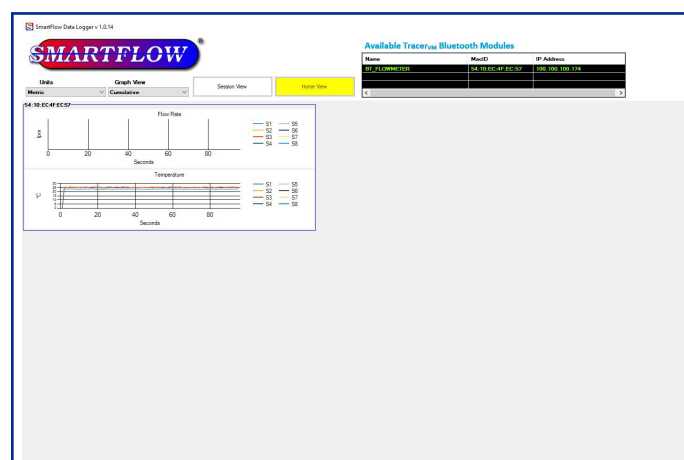

Home View

Session View

Session view displays one Smartlink Tracer_{VM} Interface with temperature and flow values for each connected Tracer_{VM} Base flowmeter. A maximum of eight flowmeters can be viewed on the screen in Session View. A maximum of 10 Smartlink Interface units can be accessed as tabs in the session view at one time.

Log files are created in Session View. These can be started manually or scheduled as needed. Maximum recorded log length is 72 hours.

Session Controls box allows users to set alerts for low or high temperature and flow conditions. When data is being recorded, an alert will pop up on screen to notify the user when a parameter has been breached. The indicator will disappear as soon as the condition that caused the alert has cleared.

Dry contact switch changes state to indicate the out of limit condition when alert is active.

Alerts and dry contact switch are disabled when session recording is not active.

Session Indicators at the top of the screen display current temperature and flow values from Tracer_{VM} Base Flowmeters that are connected to the selected Interface. Real Time Graphs are also displayed for each flowmeter connected to the Interface. Unused flowmeter locations may be disabled as needed. Active Interface units are selected via tabs located near the top of the screen.



Session View


SMARTFLOW[®] SMARTLINK Tracer_{VM} Interface

Mobile App


Tracer_{VM} Mobile App is available for free download from iTunes or the Google Play store. Search for "Tracer_{VM}". The mobile app displays temperature and flow rate data from one Interface module with up to 8 flowmeters at one time.

Functions:

- Save .csv file to USB data storage device connected to the Bluetooth Interface Module for archiving and analysis.
- Name Interfaces
- Name individual cooling circuits on the device
- Name .csv file
- Select Manual or Scheduled duration
- Select log rate interval between 1 and 3600 seconds

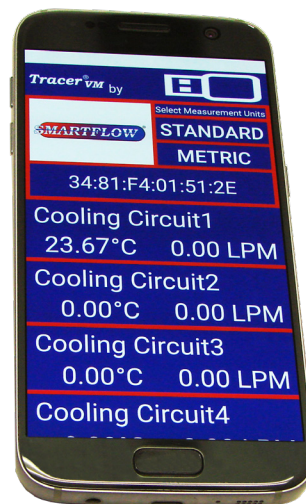

Enclosure Dimensions - Model Number VMBTI-102

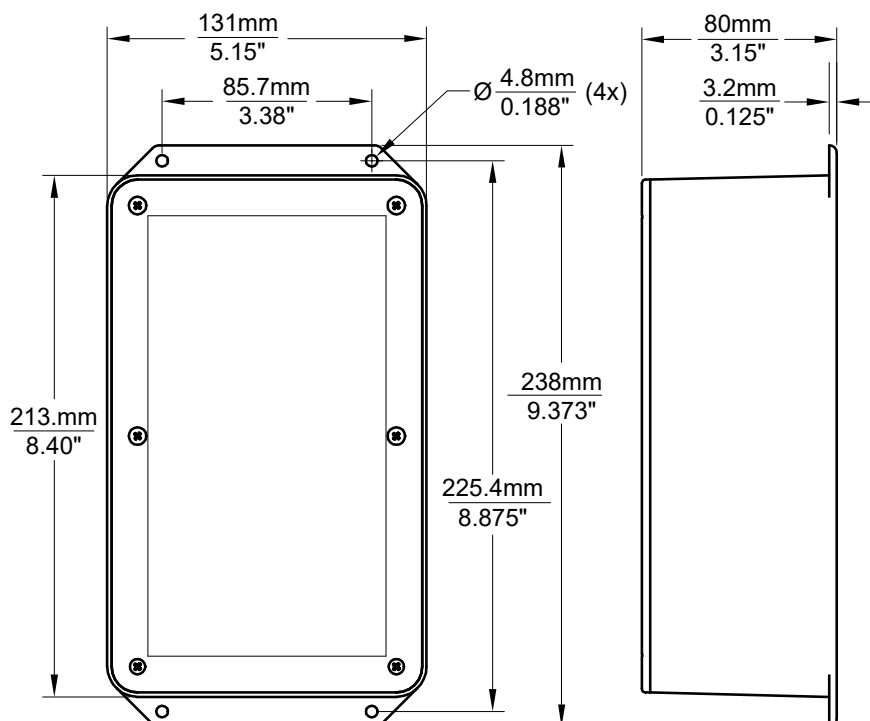

For An Inside Look at Turbulent Flow and other helpful processing articles, visit the Technical Documents section of the Smartflow-usa.com web site.